


SANLI Straight Shaft Brushcutter BCS262/265

Item No.	Part No.	Description
1-1	BCS2-1	Gearbox assembly
1-2	BCS2-17	Blade holder (A)
1-3	BCS2-18	Blade holder (B)
1-4	BCS2-19	Washer
1-5	BCS2-21	Split pin 2 x 16
1-6	BCS2-23	Clutch drum component

Item No.	Part No.	Description
1-7	BCS2-24	Clutch
1-8	BC2-33	Circlip
1-9	BC2-35	Circllet
1-10	BC2-36	Terminal pad (clutch drum case)
1-11	BC2-60	Screw assembly M6x20
1-12	BC2-55	Rubber protector

Item No.	Part No.	Description
1-13	BC2-11	Inner hexagon screw assembly
1-14	BC2-61	Inner hexagon screw assembly
1-15	BC2-57	Upper fixed plate
1-16	BC2-56	Lower fixed plate
1-17	BCS2-38	Holder assembly
1-18	BC2-036	Drive shaft
1-19	BC2-072	Aluminium pipe 1
1-20	BC2-008	Oil bearing sleeve assembly
1-21	BC2-003	Spacer sleeve
1-22	BCS2-48	Handle assembly
1-23	BC2-24	Handle
1-24	BCS2-51	Holder protector

Item No.	Part No.	Description
1-25	BCS2-22	Blade assembly
1-26	BCS2-85	Brushcutter head
1-27	BC2-L	Lever assembly complete
1-28	BCS2-034	Drive shaft 2
1-29	BCS2-233	Aluminium pipe 2
1-30	BC2-969	Connector
1-31	BC2-016	Coupling
1-32	BC2-047	Washer A
1-33	BC2-005	Bolt
1-34	BC2-089	Screw
1-35	BC2-004	Inner hexagon screw assembly
1-36	BC2-132	Screw assembly
1-37	BCS2-240	Complete guard

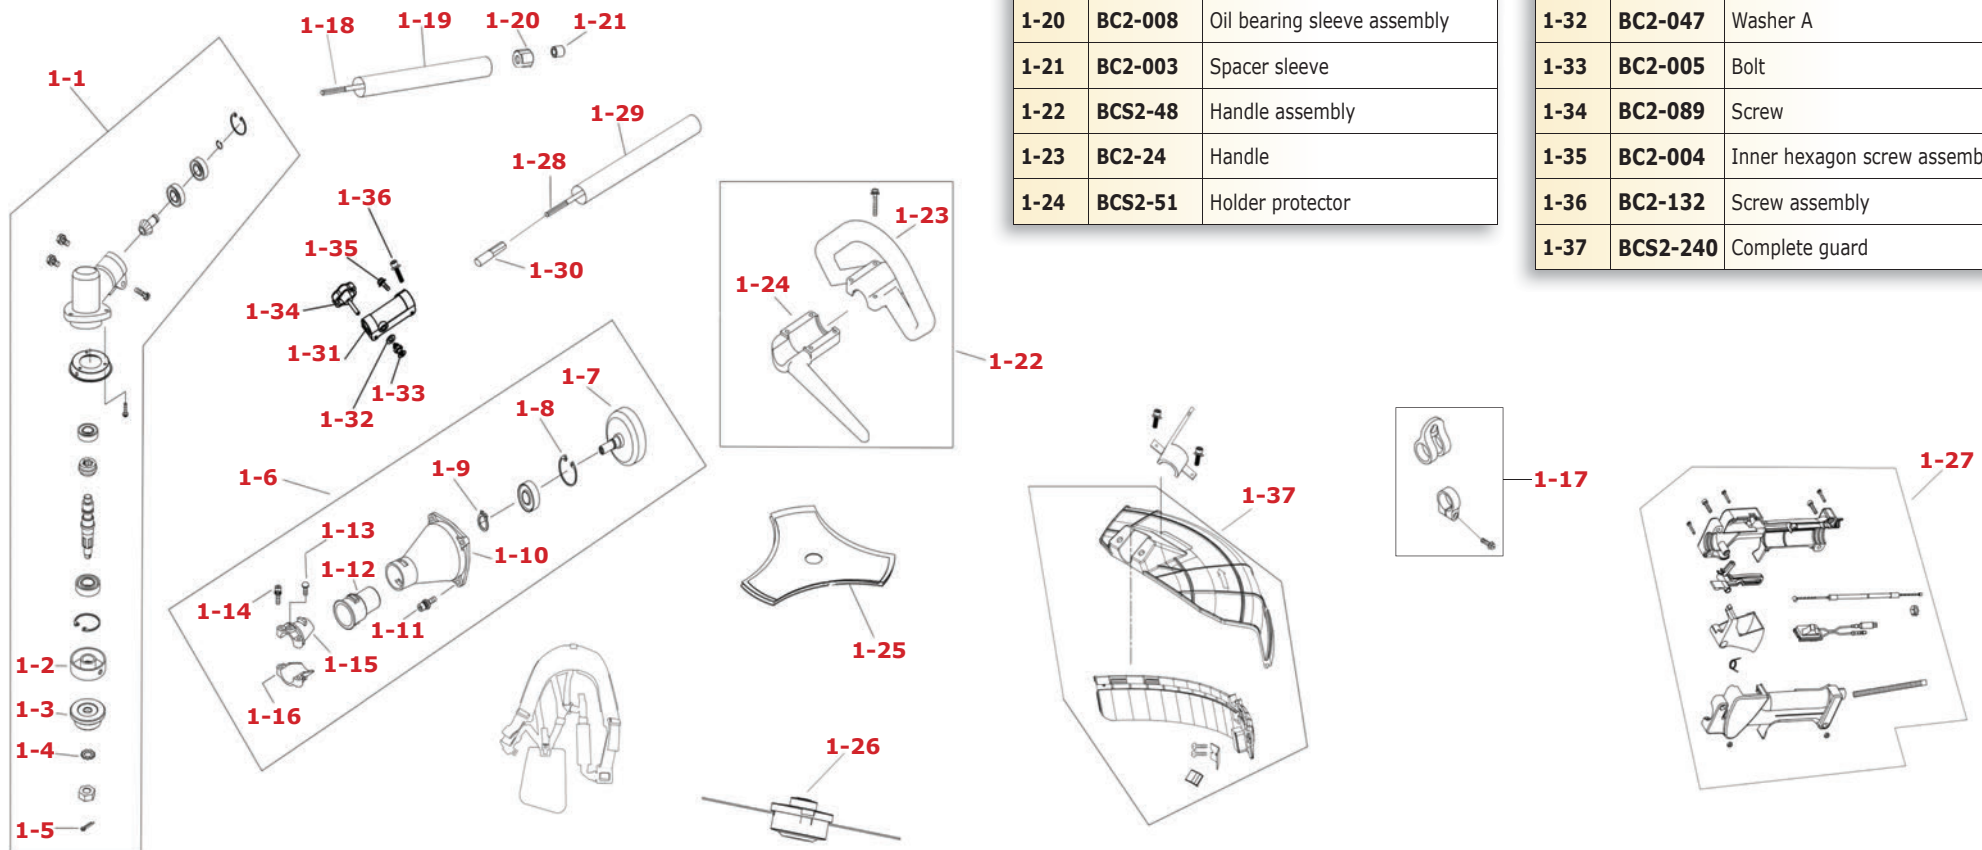



SANLI Straight Shaft Brushcutter BCS262/265

Item No.	Part No.	Description
Crankcase Components		
2-1	EN1-43	Screw M5 x 14
2-2	EN1-16	Flywheel cover
2-3	EN1-17	Screw shaft
2-4	EN1-18	Washer
2-5	EN1-19	Clutch assembly
2-6	EN1-23	Nut
2-7	EN1-27	Flywheel
2-8	BC2-61	Screw assembly M5 x 25
2-9	EN1-14	Round pin
2-10	EN1-31	Front half crankcase
2-11	EN1-33	Crankcase gasket
2-12	EN1-35	Ball bearing 6001/P5
Air Filter Components		
2-13	EN1-1	Air filter cover screw
2-14	EN1-2	Air filter cover
2-15	EN1-3	Air filter
2-16	EN1-4	Screw Assembly (BCB/BCS260, SPS260)
2-17	EN1-5	Air filter cover base
Carburettor		
2-18	EN1-9	Carburettor assembly (BCB/BCS260, SPS260)
	EN1-255	Carburettor assembly (BCB/BCS262, BCB/BCS265)
	EN1-10	Carburettor gasket (BCB/BCS260, SPS260)
	EN1-459	Carburettor gasket (BCB/BCS262, BCB/BCS265)
2-19	EN1-33	Crankcase gasket
2-20	EN1-49	Screw M5 x 20
2-21	EN1-12	Inlet manifold
2-22	EN1-13	Gasket engine side

Item No.	Part No.	Description
Fuel Tank		
2-23	EN1-62	Fuel tank cap assembly
2-24	EN1-69	Fuel tank
	EN1-170	Fuel tank (BCB/BCS262, BCB/BCS265)
2-25	EN1-70	Plate washer
2-26	EN1-70	Screw M5 x 20
2-27	EN1-76	Outlet fuel hose
2-28	EN1-75	Inlet fuel hose
	EN1-74	Fuel tank grommet (BCB/BCS260, SPS260)
2-29	EN1-73	Fuel tank filter
Starter Assembly		
2-30	EN1-57	Crankshaft / flywheel key
2-31	EN1-60	Gudgeon pin bearing
2-32	EN1-36	Crankshaft / con rod assembly
2-33	EN1-35	Ball bearing 6001/P5
2-34	EN1-34	Oil seal 12 x 22 x 7
2-35	EN1-14	Round Pin
2-36	EN1-37	Rear half crankcase
2-37	EN1-38	Starter pawl assembly
	EN1-032	Starter pawl assembly (BCB/BCS262, BCB/BCS265)
2-38	EN1-42	Starter assembly
2-39	EN1-15	Screw M4 x 16
Muffler Assembly		
2-40	EN1-52	Screw M5 x 55
2-41	EN1-29	Spring washer
2-42	EN1-30	Washer
2-43	EN1-51	Muffler
2-44	EN1-50	Muffler gasket
	EN1-328	Muffler gasket (BCB/BCS262, BCB/BCS265)

Item No.	Part No.	Description
Cylinder & Cover		
2-45	EN1-43	Screw M5 x 14
2-46	EN1-44	Top cover (BCB/BCS260, SPS260)
	EN1-45	Engine cover (BCB/BCS260, SPS260)
	EN1-296	Engine cover (BCB/BCS262, BCB/BCS265)
2-47	EN1-46	Screw M4 x 12
2-48	EN1-24	Stop line
2-49	EN1-25	Primary cord grommet
2-50	EN1-15	Screw M4 x 16
2-51	EN1-26	Ignition coil assembly
	EN1-026	Ignition coil assembly (BCB/BCS262, BCB/BCS265)
2-52	EN1-29	Spring washer
2-53	EN1-30	Washer
2-54	RCJ6Y/ BPMR7A	Spark plug
	EN1-77	Spark plug boot (BCB/BCS260, SPS260)
2-55	EN1-53	Cylinder (BCB/BCS260, SPS260)
2-56	EN1-54	Cylinder base gasket (BCB/BCS260, SPS260)
2-57	EN1-55	Piston rings / set
2-58	EN1-56	Piston
2-59	EN1-58	Stop ring
2-60	EN1-59	Gudgeon pin
2-61	EN1-61	Gudgeon pin circlip

SANLI Straight Shaft Brushcutter BCS262/265

