

Blower SLB260, SLB262, SLB265




**Refer to page 890 for engine breakdown*

Picture for illustration purposes only.

Item	Part No.	Description
1	BL2-3	Fan cover
	BL2-20	Connect cover
2	BL2-18	Rear cochlea case
3	BL2-5	Spring
4	BL2-6	Washer
5	BL2-7	Spring shaft
6	BL2-17	Impeller
7	BL2-8	Left handle rubber cover
8	BL2-9	Stop switch
9	BL2-10	Short stop wire
10	BL2-12	Throttle lever shaft
11	BL2-11	Throttle lever
12	BL2-15	Pedestal

Item	Part No.	Description
13	BL2-21	Front cochlea case
14	EN1-76	Return fuel pipe
15	EN1-74	Fuel tank grommet
16	EN1-75	Inlet fuel pipe
17	BL2-33	Fuel filter
18	BL2-35	Throttle wire component
19	BL2-24	Upper handle
20	BL2-22	Fuel tank
21	BL2-25	Right handle rubber cover
22	BL2-23	Lower handle
23	BL2-42	Blow the breeze tube A
24	BL2-43	Blow the breeze tube B
25	BL2-S	Starter assembly (SLB260)
	BL2-SA	Starter assembly (SLB262, SLB265)
26	BL2-34	Fuel tank cap
27	BL2-28	Stop wire
28	BL2-36	Starting rope reel
29	BL2-37	Cole spring
30	BL2-40	Starter rope
31	BL2-41	Starter handle

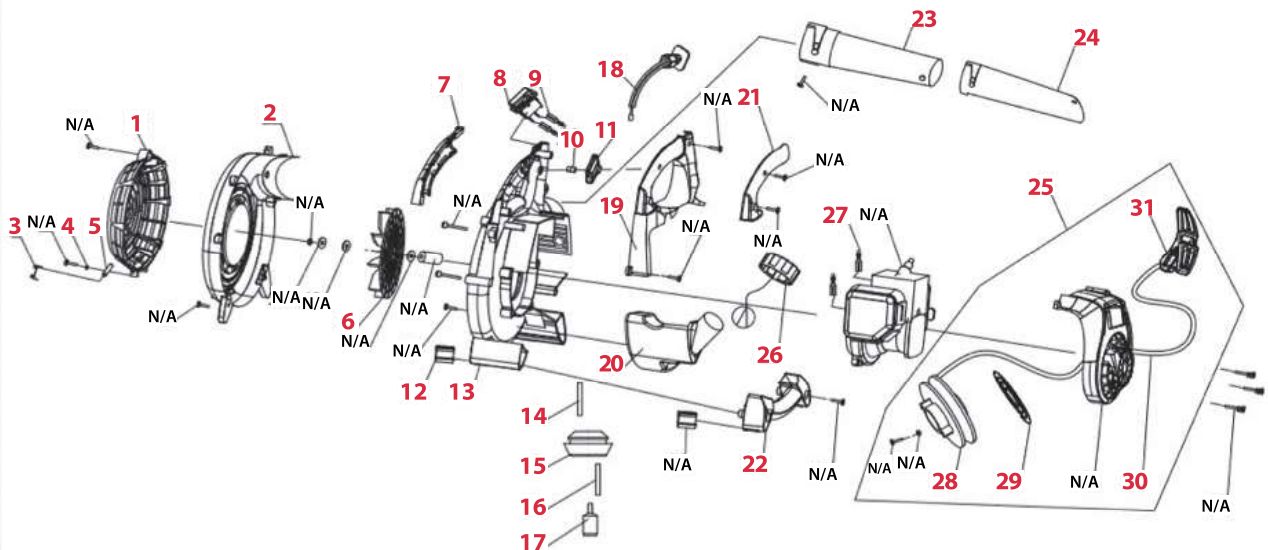

26cc Engine for BCB/BCS260, 262, 265, SPS260

Item	Part No.	Description
Crankcase Components		
1	EN1-43	Screw M5 x 14
2	EN1-16	Flywheel cover
3	EN1-17	Screw shaft
4	EN1-18	Washer
5	EN1-19	Clutch assembly
6	EN1-23	Nut
7	EN1-27	Flywheel
8	BC2-61	Screw assembly M5 x 25
9	EN1-14	Round pin
10	EN1-31	Front half crankcase
11	EN1-33	Crankcase gasket
12	EN1-35	Ball bearing 6001/P5
Air Filter Components		
13	EN1-1	Air filter cover screw
14	EN1-2	Air filter cover
15	EN1-3	Air filter
16	EN1-4	Screw Assembly (BCB/BCS260, SPS260)
17	EN1-5	Air filter cover base
Carburettor		
18	EN1-9	Carburettor assembly (BCB/BCS260, SPS260)
	EN1-255	Carburettor assembly (BCB/BCS262, BCB/BCS265)
	EN1-10	Carburettor gasket (BCB/BCS260, SPS260)
	EN1-459	Carburettor gasket (BCB/BCS262, BCB/BCS265)
19	EN1-33	Crankcase gasket
20	EN1-49	Screw M5 x 20
21	EN1-12	Inlet manifold
22	EN1-13	Gasket engine side
Fuel Tank		
23	EN1-62	Fuel tank cap assembly
24	EN1-69	Fuel tank
	EN1-170	Fuel tank (BCB/BCS262, BCB/BCS265)
25	EN1-70	Plate washer
26	EN1-70	Screw M5 x 20
27	EN1-76	Outlet fuel hose
28	EN1-75	Inlet fuel hose
	EN1-74	Fuel tank grommet (BCB/BCS260, SPS260)
	EN1-73	Fuel tank filter

Item	Part No.	Description
Starter Assembly		
30	EN1-57	Crankshaft / flywheel key
31	EN1-60	Gudgeon pin bearing
32	EN1-36	Crankshaft / con rod assembly
33	EN1-35	Ball bearing 6001/P5
34	EN1-34	Oil seal 12 x 22 x 7
35	EN1-14	Round Pin
36	EN1-37	Rear half crankcase
37	EN1-38	Starter pawl assembly
	EN1-032	Starter pawl assembly (BCB/BCS262, BCB/BCS265)
38	EN1-42	Starter assembly
39	EN1-15	Screw M4 x 16
Muffler Assembly		
40	EN1-52	Screw M5 x 55
41	EN1-29	Spring washer
42	EN1-30	Washer
43	EN1-51	Muffler
44	EN1-50	Muffler gasket
	EN1-328	Muffler gasket (BCB/BCS262, BCB/BCS265)
Cylinder & Cover		
45	EN1-43	Screw M5 x 14
46	EN1-44	Top cover (BCB/BCS260, SPS260)
	EN1-45	Engine cover (BCB/BCS260, SPS260)
	EN1-296	Engine cover (BCB/BCS262, BCB/BCS265)
47	EN1-46	Screw M4 x 12
48	EN1-24	Stop line
49	EN1-25	Primary cord grommet
50	EN1-15	Screw M4 x 16
51	EN1-26	Ignition coil assembly
52	EN1-29	Spring washer
53	EN1-30	Washer
54	RCJ6Y/ BPMR7A	Spark plug
	EN1-77	Spark plug boot (BCB/BCS260, SPS260)
55	EN1-53	Cylinder (BCB/BCS260, SPS260)
56	EN1-54	Cylinder base gasket (BCB/BCS260, SPS260)
57	EN1-55	Piston rings / set
58	EN1-56	Piston
59	EN1-58	Stop ring
60	EN1-59	Gudgeon pin
61	EN1-61	Gudgeon pin circlip