


# STRAIGHT SHAFT BRUSHCUTTER BCS260

Item	Part No.	Description
<b>Gear Case Components</b>		
1	BCS2-1	Gear case assembly
17	BCS2-17	Blade holder (A)
18	BCS2-18	Blade holder (B)
19	BCS2-19	Washer
21	BCS2-21	Split pin 2 x 16
<b>Blade</b>		
22	BCS2-22	Blade
<b>Clutch Drum Component</b>		
23	BCS2-23	Clutch drum component
24	BCS2-24	Clutch drum
25	BC2-33	Circlip 35
29	BC2-55	Rubber cover
31	BC2-62	Washer 5
36	BC2-59	Washer 6
37	BC2-58	Washer 6
<b>Harness Tube Clamp</b>		
38	BCS2-38	Harness tube clamp assembly
<b>Shaft Component</b>		
43	BCS2-43	Straight shaft assembly
44	BCS2-44	Rubber bush
45	BCS2-45	Oil-bearing 8 x14 x 14
<b>Handle</b>		
48	BCS2-48	Handle assembly
<b>Harness Assembly</b>		
84	BCS2-84	Harness
<b>Nylon Cutting Head</b>		
85	BCS2-85	Brushcutter head
<b>Safety Guard Components</b>		
74	BCS2-74	Safety guard bracket
76	BCS2-76	Safety guard
77	BCS2-77	Safety guard spacer
83	BCS2-83	Safety guard blade holder



Picture for illustration purposes only.

Item	Part No.	Description
<b>Throttle Lever Components</b>		
52	BC2-L	Throttle control assembly
42	BC2-7	Nut M5
54	BC2-41	Clamp
56	BC2-39	Rubber handle cover
57	BC2-38	Clamp
58	BC2-53	Stop switch
61	BC2-45	Spring
62	BC2-47	Safety lever
63	BC2-46	Spring
64	BC2-48	Throttle trigger
65	BC2-49	Throttle cable

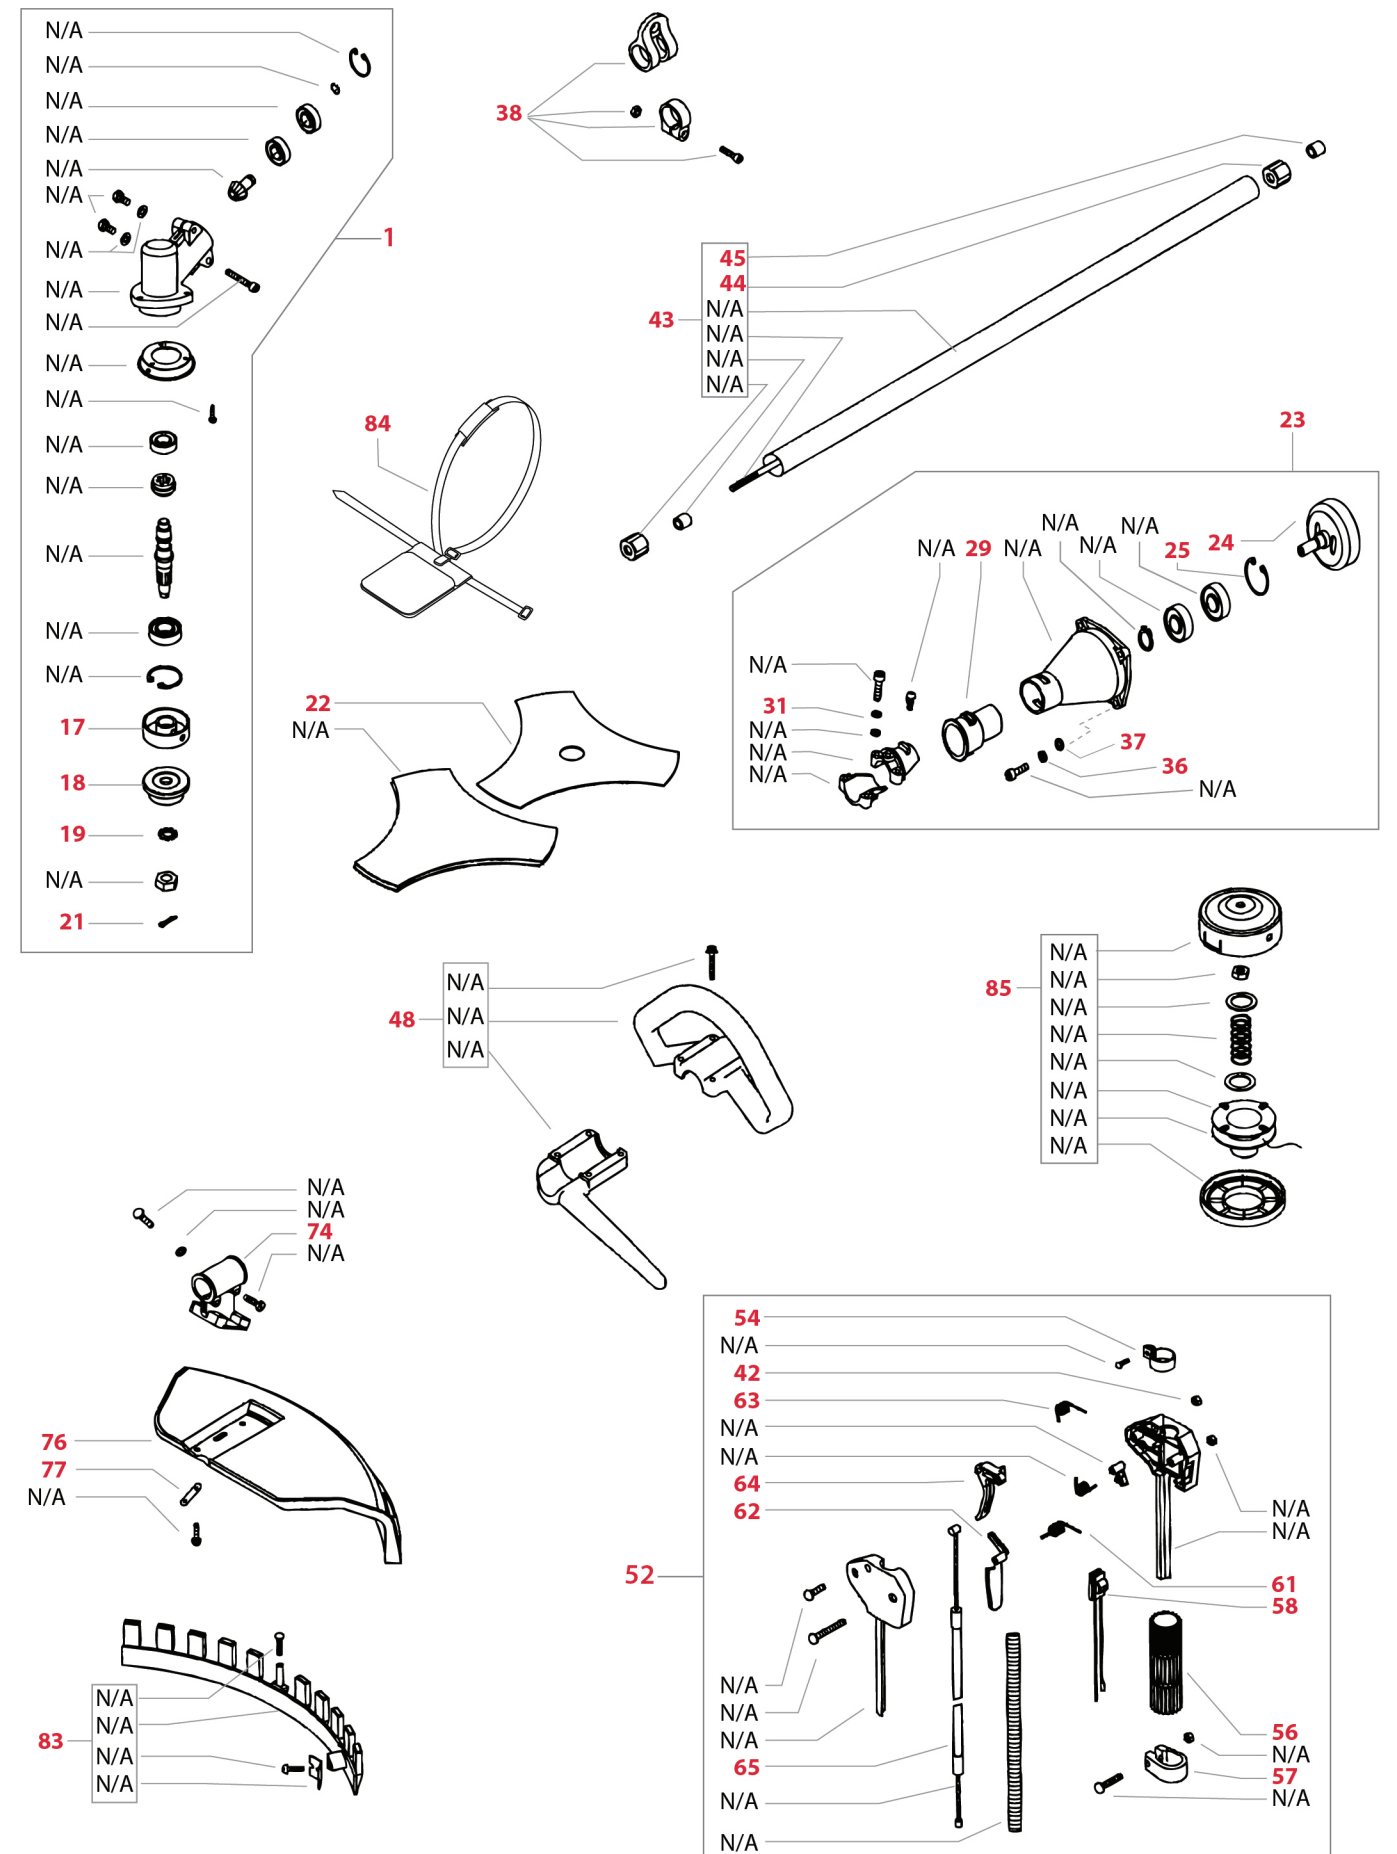

## 26CC ENGINE (to suit BCB260, BCS260, SPS260)

Item	Part No.	Description
<b>Air Filter Components</b>		
1	EN1-1	Air filter cover screw
2	EN1-2	Air filter cover
3	EN1-3	Air filter
5	EN1-5	Air filter cover base
<b>Carburettor Components</b>		
9	EN1-9	Carburettor assembly
10	EN1-10	Gasket carby side
11	EN1-11	Screw M5 x 20
12	EN1-12	Inlet manifold
13	EN1-13	Gasket engine side
<b>Flywheel Components</b>		
15	EN1-15	Screw M4x16
16	EN1-16	Flywheel cover
<b>Engine Cover Components</b>		
44	EN1-44	Top cover
45	EN1-45	Engine cover
<b>Ignition Coil Components</b>		
15	EN1-15	Screw M4x16
25	EN1-25	Primary cord grommet
26	EN1-26	Ignition coil assembly
27	EN1-27	Flywheel
77	EN1-77	Spark plug boot
<b>Crankcase Components</b>		
30	EN1-30	Washer
31	EN1-31	Front half crankcase
33	EN1-33	Crankcase gasket
34	EN1-34	Oil seal 12 x 22 x 7
35	EN1-35	Ball bearing 6001/P5
36	EN1-36	Crankshaft / conrod assembly
37	EN1-37B	Rear half crankcase
15	EN1-15	Guid plate screw M4 x 16
57	EN1-57	Crankshaft / flywheel key

Item	Part No.	Description
<b>Starter Pawl Components</b>		
38	EN1-38	Starter pulley
<b>Starter &amp; Starter Screw</b>		
42	EN1-42	Starter assembly
15	EN1-15	Screw M4 x 16
<b>Fuel Tank Components</b>		
62	EN1-62	Fuel tank cap assembly
69	EN1-69	Fuel tank
73	EN1-73	Fuel tank filter
74	EN1-74	Fuel tank grommet
75	EN1-75	Inlet fuel hose
76	EN1-76	Outlet fuel hose
<b>Clutch Components</b>		
19	EN1-19	Clutch assembly
<b>Spark Plug Components</b>		
48	RCJ6Y/BPMR7A	Spark plug
<b>Muffler Assembly</b>		
52	EN1-52	Screw M5x55
30	EN1-30	Washer
51	EN1-51	Muffler
50	EN1-50	Muffler gasket
<b>Engine Cylinder Components</b>		
53	EN1-53	Cylinder
54	EN1-54	Cylinder base gasket
55	EN1-55	Piston rings / set
56	EN1-56	Piston
58	EN1-58	Stop ring
59	EN1-59	Gudgeon pin
60	EN1-60	Gudgeon pin bearing
61	EN1-61	Gudgeon pin circlip

